


NIR Plus

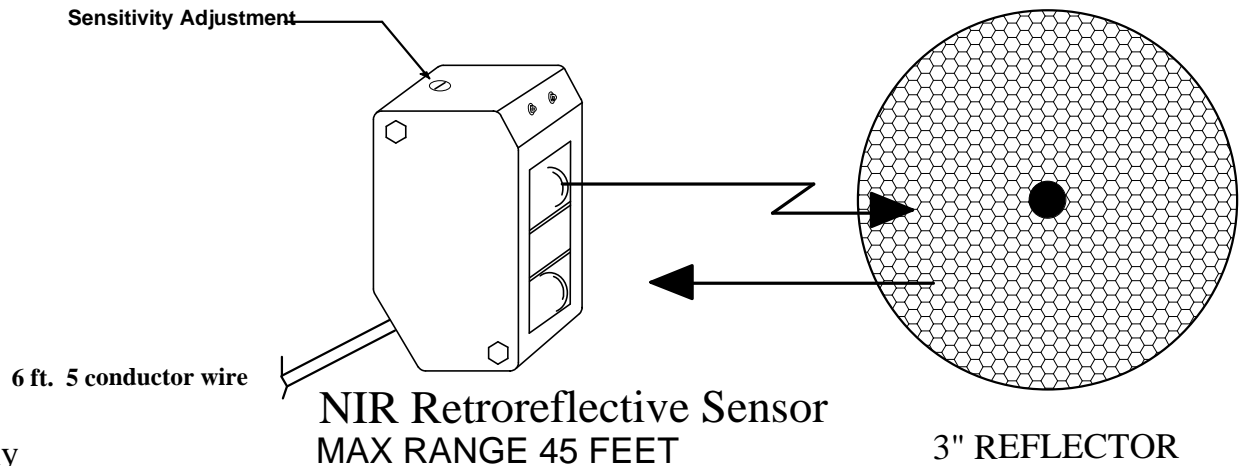

Power Supply
24-240 V.A.C.
12-240 V.D.C.

Current draw 28Ma standby/ 15 Ma detect @ 12VDC

Operating Instructions

1. Connect Blue wire to one output of the supply voltage
2. Connect Brown wire to second output of the supply voltage
3. Connect Red (Com.) wire to proper terminal in operator control unit.
4. Connect White wire (N.O.) or Black wire (N.C.) to proper terminal in operator control unit.
(When Energized)
5. Green LED is on when unit is Aligned and sensitivity is high enough.
6. Yellow LED is on when unit is energized and alignment is correct
7. Yellow LED is off when unit is energized and objects are detected.

Do not lower sensitivity unless unit is receiving interference.

EMX Industries Inc. 1-800-426-9912 216-518-9888