

PA4020 RF INTERCOM KEYPAD

USER MANUAL

Rev. A

Platinum Access Systems Inc.

SPECIFICATIONS AND FEATURES

1. RF Wireless Intercom

Long range RF intercom communication.

2. Key Code Range

Primary / Secondary

5 digit code: 00000-99999

4 digit code: 0000-9999

Memory Capacity: 10,000 (4 digit), 100,000 (5 digit) codes
for primary and secondary key entry.

3. Hold Open Operation

Resettable 5 digit code to turn on/off hold open operation

4. Request to Exit Input

A contact input for codeless open activation.

5. Adjustable Control Output Strike Duration

Primary: 0-9s output relay strike duration.

Secondary: 0-9s output strike duration.

6. Control Output

Primary/Secondary NO/NC relay outputs with 1A @ 30VDC.

7. DC or Solar Panel Power Supply

The unit can be powered by 12-24V DC or solar panel.

INSTALLATION

1. Wiring

See Fig.1.

- Unplug “-BAT+” and “*12-24V*” header from the board.
- Connect NC1/COM1/NO1 to primary gate.
- If required, connect NC2/COM2/NO2 to secondary gate.
- If required, connect “EXIT” to external strike open switch.
- Turn on the unit by plugging a 12V-24V DC power supply to

“*12-24V*” terminal.

Note: 1). “*12-24V*” terminal is non polarity port.

2).If solar panel is used, connect solar panel to
“*12-24V*” terminal.

f. Re-plug in “-BAT+” headers.

g. Use “DIGITS” jumper to select “4” or “5” digits code
operation.

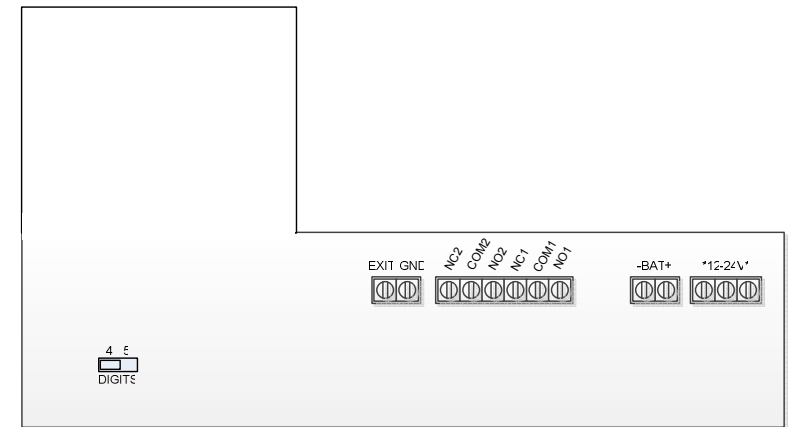


Fig.1 Board Connectors

2. Indicator and Mode Switch Locations

See Fig.2.

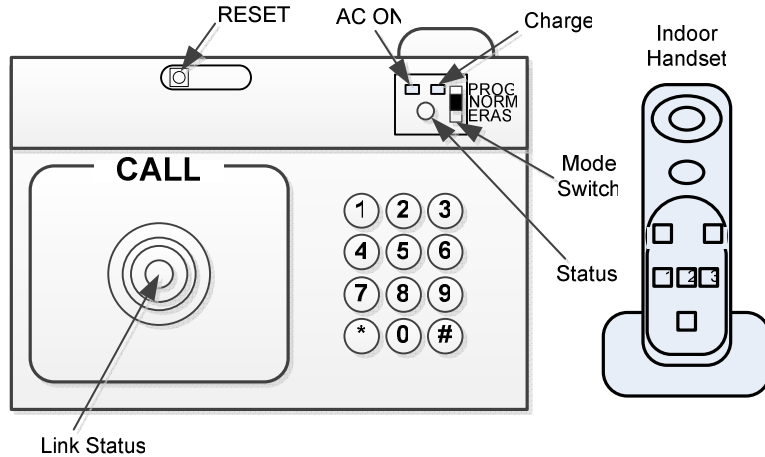


Fig.2 Indicators

OPERATIONS

1. Normal Mode

Selected by Mode SW (“NORM” position).

Intercom:

- To call indoor handset, touch “CALL” button.
- When the indoor handset is picked up, audio communication will be established.
- Push the “key” button on indoor handset to open the gate remotely.
- To hang the call, push “*” key on outdoor unit or “hang” button on indoor handset unit.

Key Entry:

- To open primary gate, enter 4 or 5 key code.
- To open secondary gate, enter #2 + 4 or 5 key code.
- To hold open, enter #3xxxxx. xxxxx: 5 digit code

(00000-99999)

- To release hold open, enter #3xxxxx again.

2. Program Mode

Selected by Mode SW (“PRGM” position), "Green" light flas

Program Primary Key Code: Enter 4 or 5 key Code

Program Secondary Key Code: Enter #2 + 4 or 5 key Code

Program Command:

- Control output strike duration (default 1s)

#4xx xx: 00-09s Primary control

#6xx xx: 00-09s Secondary control

- Hold open code

#3xxxxx xxxxx: 5 digit code (00000-99999)

3. Erase Mode

Selected by Mode SW (“ERAS” position), "Red" light flash.

Erase Primary Key Code: Enter 4 or 5 key code

Erase Secondary Key Code: Enter #2 + 4 or 5 key code

#911 Erase all primary codes

#913 Erase hold open code

#914 Erase all secondary codes

4. EXIT Input

“EXIT” input will activate primary control relay at any time.