


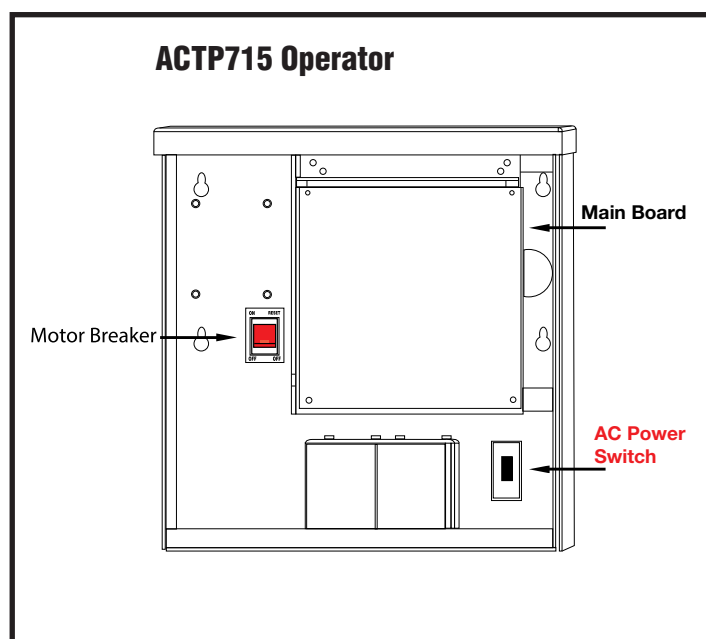

PLATINUM ACCESS SYSTEMS, INC.

# Quick Installation Steps for ACTP715 Operator

1. Please mount the actuator arm like it shown in manual Page 8 to page 11.
2. Select a safe location to install Control Box as show in manual page 15 & page 16.
3. Make sure the main power source breaker is OFF. Turn the Motor Breaker switch to OFF position. Turn AC power switch OFF in the control box. Then manually push and pull the gate to adjust the limit switch to set the OPEN limit position and CLOSE limit position in the arm.
4. Connect the 7-conducting wires to the Primary connector on main control board, and to the Secondary connector on the main board if you using two actuator arms(Seepage 21 in manual for the location of the Primary/Secondary connectors). Please make sure connect the ground wire from the actuator cable to the control box for grounding purpose.
5. Make sure the main power source breaker is still OFF and the operator Power A/C switch is OFF. Then connect the AC Power Source wires to the operator Power Input wires. White to White, Black to Black, and Green to Green (**Operator must be grounded to the earth to protect the operator from lightning**).
6. Now you can hook up the remote control receiver, keypad, or the other input devices to the main boards (See page 23 and 24 in manual for Keypad and radio Receiver connection).
7. Turn on the Main Power Source Breaker. Then turn on the operator Power A/C switch. Then turn on the motor breaker to rest the main board.
8. Then press OPEN, or CLOSE button on the main board to check if you have set the Close Limit position and Open Limit position correct, or not. Now you can use the OPEN and CLOSE switches on the main board, or remote control to help to set the limit switch positions correctly if need.
9. Set the Sensitivity correctly (Default setting is set between 2 and 3 O'clock. See page 28 for the location of the location of the Gate SNS pot).
10. Set the TIMER to the way that you wanted (see page 28 for the location of the TIMER Pot).
11. Set the P/S SYNC if need for Primary, and Secondary gates (See page 28 for the location of the P/S SYNC pot).
12. Once you have confirmed the limit positions set correctly. Then turn OFF the motor breaker, wait for 3 second, then turn the Motor Breaker back to be ON to rest the board.
13. Then Press Open, or Close button once, or use the remote control to let the gate to learn again to confirm the OPEN and CLOSE limit positions.( The gate should not hit anything like the wall, or the pole when the gate is at fully open position, or at fully close position).
14. Now the gate is ready for normal operation.



## PLATINUM ACCESS SYSTEMS, INC.

1725 E. Grevillea Court, Ontario, CA 91761 I Sales: (909) 259-6005 I Fax: (909) 923-7890 I www.platinumasi.com

Technical Support (909) 259-6001 I Email: sales@platinumasi.com I techsupport@platinumasi.com