

Platinum Model PL-JS-181 Receiver Installation & Program procedure:

A. Platinum Receiver PL-JS-181 Installation:

1. Connect Red , Black, and two Grey wires to RADIO J11 in the following way:
Connect Red wire to +28V
Connect any one Grey wire to RAD
Connect Black wire and the other Grey wire to GND.
2. This receiver is 4 channel and be used in a number of ways.

Optional: connect two blue wires to Radio j11 if you want to reset the operator by the transmitter.


If someone wants to use this receiver acts like e OPEN-STOP-CLOSE switch. Then

Addition two 22AGW wires can connect to Channel 2 in receiver.

Addition two 22AWG wires can connect to Channel 3 in receiver.

Next program the button-2 to work with Channel-2 in receiver.


Program button-3 to work with Channel-3 in receiver.

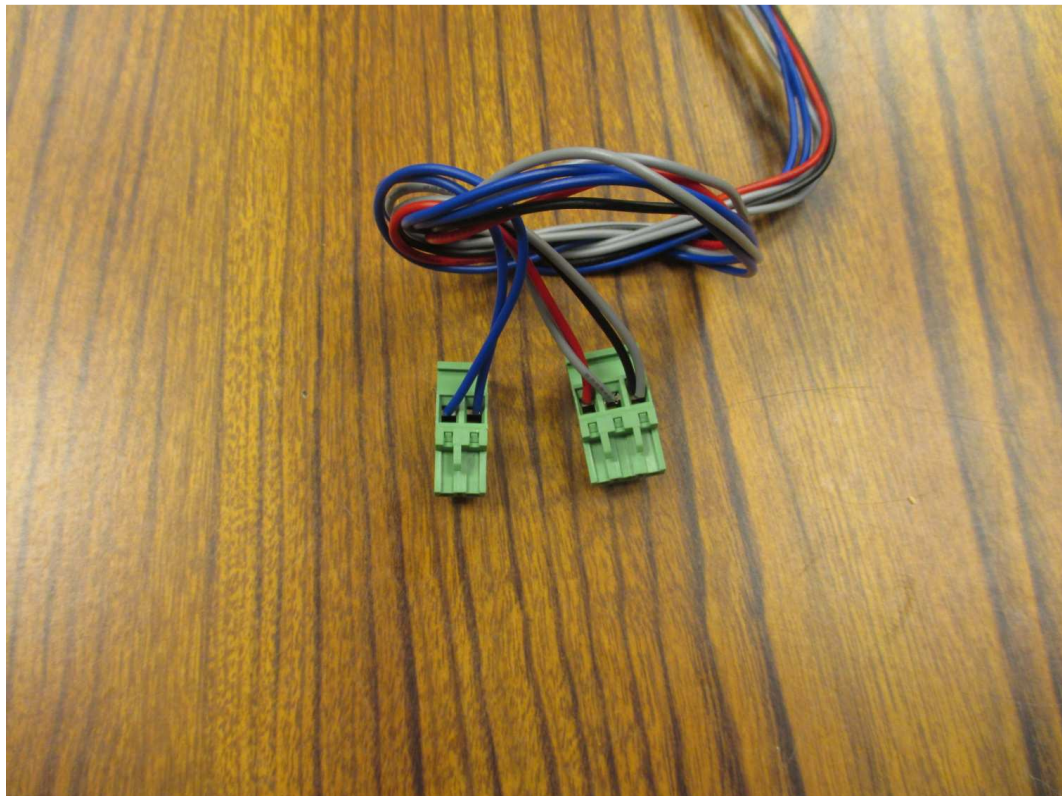

Receiver Wire Connection Picture 1

B. Programming the PL-JS-181 Receiver to work with the PL-RC-C1 Transmitter:

1. Open the Receiver by take off the screw on the bottom side of the receiver.
2. Press down and then release the K1 tactile switch which is locate at the corner that near the silver crystal in the receiver. The LED will turn in green. Then press down and hold button #1 on the Platinum Transmitter PL-RC-C1 for 3 seconds.
3. The Receiver LED will be flashing once it has learned the Transmitter code successfully.
4. Wait for about 5 seconds. Then press button #1 on the Transmitter to confirm the transmitter works with the receiver. If not, then repeat step 2 to step 4 to make it works.
5. Repeat step 2 to step 3 to program the other three transmitter buttons if need.

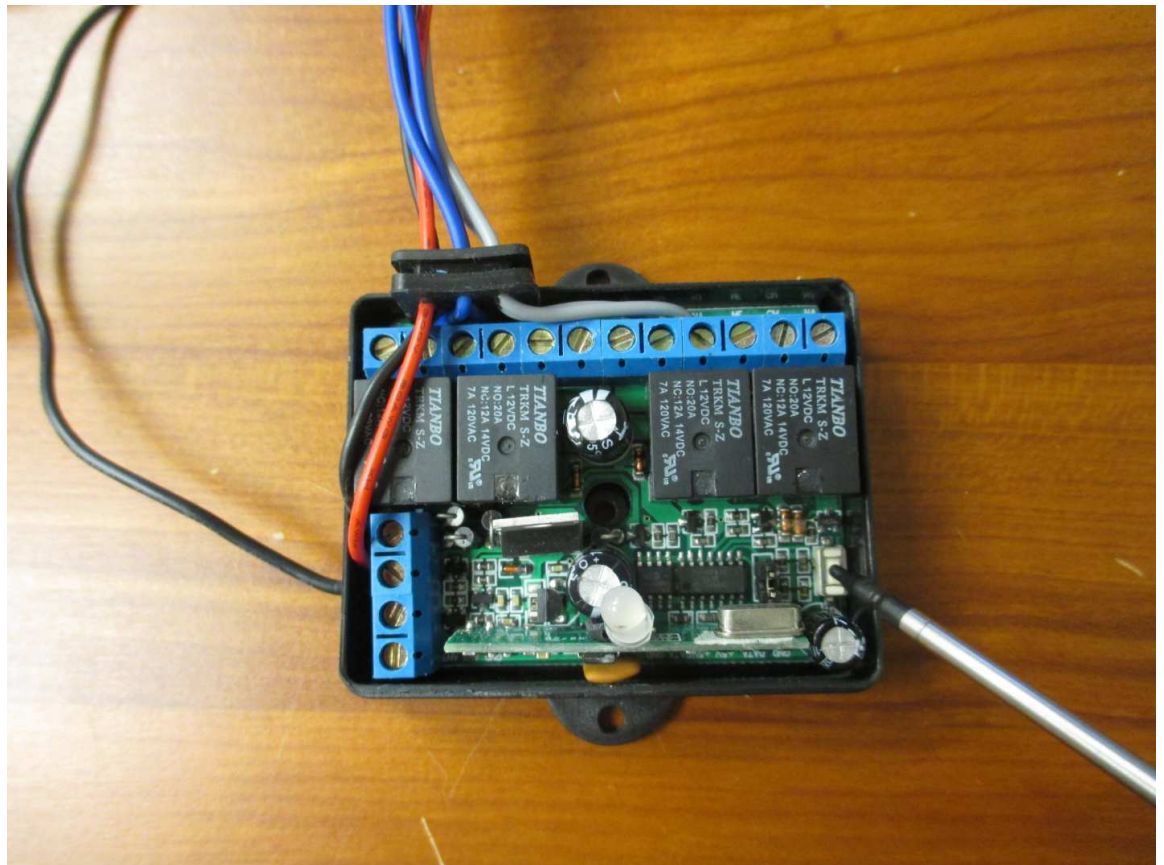

Location of the Tactile Switch in the PL-JS-181 Receiver

Procedure to make the Transmitter PL-CRC-I11 copy the Transmitter PL-RC-C1 code:

1. Press down both buttons in the same time on the PL-CRC-I11 transmitter and hold it till the blue LED flashing for 3 seconds (It takes about 13 seconds totally).
2. Next bring both transmitters PL-RC-C1 and PL-CRC-I11 close to each other. Make sure the transmitter PL-RC-C1 antenna is touching the transmitter PL-CRC-I11 top middle surface.
3. Press down PL-CRC-I11 transmitter "A" button and hold it. Then press down the PL-RC-C1 #1 button. The PL-CRC-I11 blue LED will flash a few times once it has learned the code successfully.
4. Repeat step 2 to Step 3 to make the PL-CRC-I11 button" B" to learn the #2,#3, or #4 button code from the PL-CR-C1 transmitter.



Picture shown the position of the transmitters when using transmitter PL-CRC-I11 to copy the code from transmitter PL-RC-C1

Procedure to Erase the Transmitter PL-CRC-I11 code :

1. Press and hold both button A & button B down until the blue LED flashing for 3 seconds. Normally it takes about 10 seconds.

Procedure to Erase All PL-JS-181 Radio Receiver codes :

1. Press and hold down the K1 tactile switch for 10 seconds, then release it. This switch is located at the corner that near the silver crystal in the receiver. The LED turns in green first, then flash 4 times before turning off. Then take the radio receiver connector off from the Radio port in the main control board. Wait for 6 seconds, next plug the radio receiver connector back to the radio port on the main control board. All codes in the receiver are gone now.