 
 


PA1035 Code Program Example

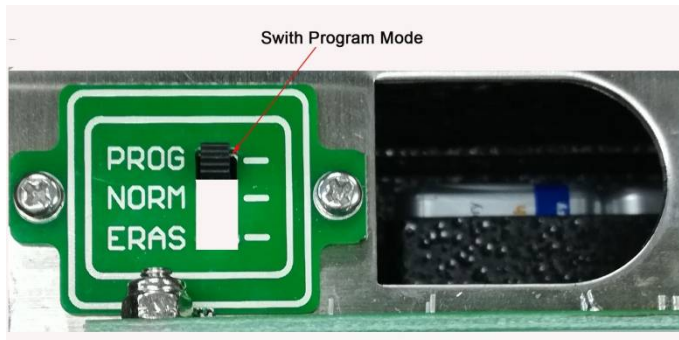

Example 1. Program Primary Key Code 3454:


1. Switch to PROG mode.
2. Enter 3454.
3. Enter 3454 again.
4. You will hear two bees if the key code is good.

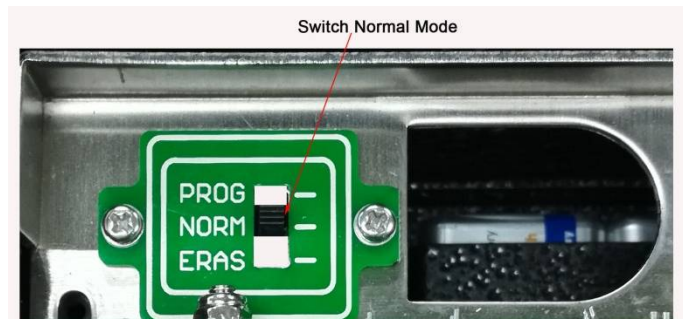

5. Switch to NORM mode.
6. Enter 3454.
7. You will hear two bees if the key code is valid.
8. You have successfully entered 3454 as your new key code.


Example 2. Program Hold Open Key Code(5-Digits) 27542:

1. Switch to PROG mode.
2. Enter #327542,
3. Enter #327542 again.
4. You will hear two bees if the key code is good.

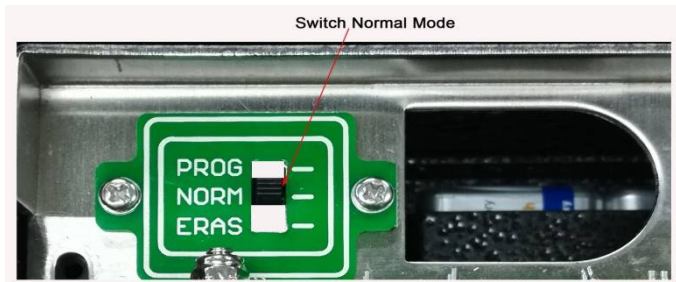


5. Switch to NORM mode.
6. Enter #327542.
7. You will hear two bees if the key code is valid.
8. You have successfully entered 27542 as your new Hold Open key code.

Example 3. Erase Primary Key Code 3454:

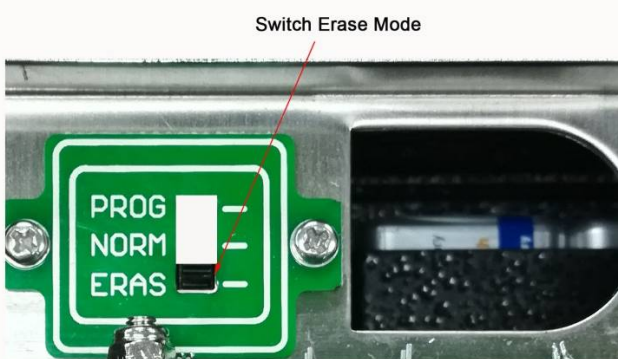


1. Switch to ERASE mode.
2. Enter 3454.
3. Enter 3454 again.
4. You will hear two bees if the key code is good.

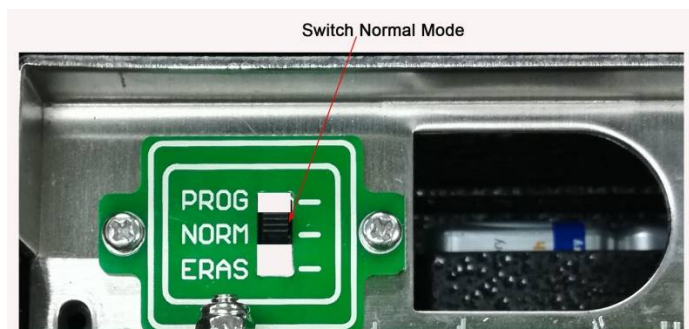


5. Switch to NORM mode.
6. Enter 3454,
7. You will hear one bee if the key code has erased.
8. You have successfully erased 3454 old key code.

Example 4. Erase ALL Primary Key Codes:

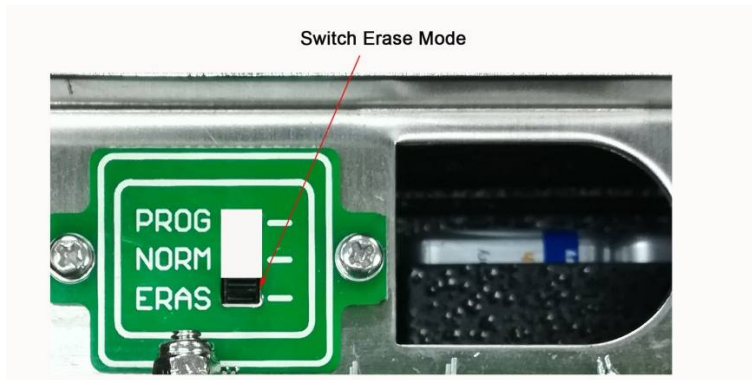


9. Switch to ERASE mode.
10. Enter #911.
11. Enter #911 again.
12. You will hear two bees if the key code is good.

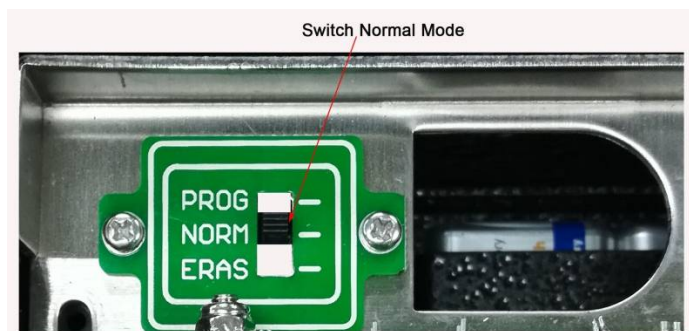


13. Switch to NORM mode.
14. Enter any old primary key code to check if it is still valid,
15. You will hear one bee if the key code has erased.
16. You have successfully erased all old key codes.

Example 5. Erase Hold Open Key Code 27542:

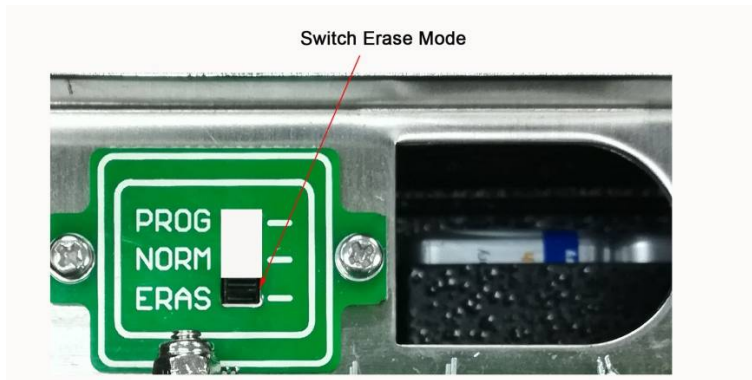


17. Switch to ERASE mode.
18. Enter #913.
19. Enter #913 again.
20. You will hear two bees if the key code is good.

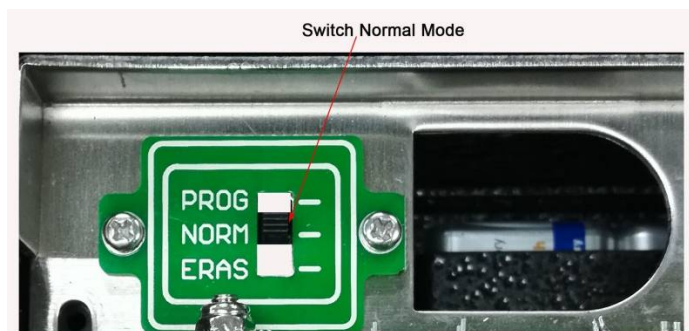

21. Switch to NORM mode.
22. Enter #327542.
23. You will hear one bee if the Hold Open code has erased.
24. You have successfully erased the Hold Open codes 27542.

Example 6. Program RF Receiver with Key Code 3454:

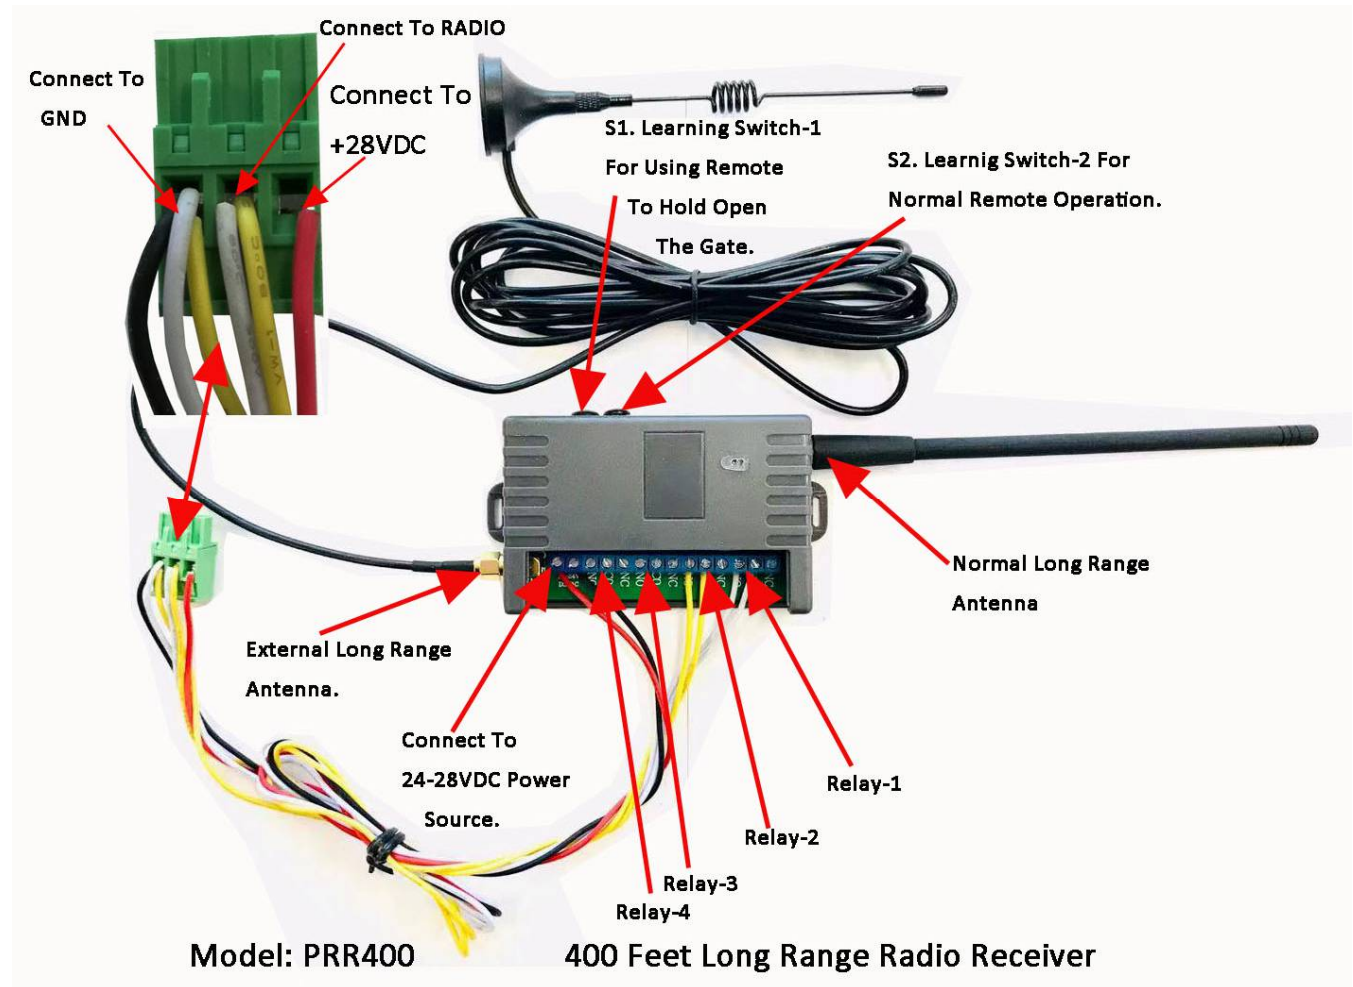

1. Remove the S2 plastic covercap.of the receiver.
2. Using a small screw driver press down and then release the **S2 tactile switch**. The Green/Red LED light will turn on. Then enter Key Code 3454 from the keypad.
3. The Receiver LED light will be flashing once it has learned the key code successfully.
4. Wait for about 5 seconds. Then enter key code 3454 to confirm it works with the receiver. If not, then repeat step 2 to step 4 to make it works.

